

IMPORTANT DOCUMENT – PLEASE RETAIN!



Operating instructions

 
 
LEUCHTIE® Mini with motion and magnetic sensor for small dogs

Initial start-up

To prevent your LEUCHTIE Mini from switching on during transport, one of the batteries has been inserted upside down as a transport lock. For the initial start-up this battery must be turned around.


Turning the battery

- Separate the tube **at the side of the brand label** from the battery compartment **with a slight twisting movement**, taking care not to use excessive force.
- Remove the battery from the light tube and turn it around.
- Insert the battery into the light tube with the negative pole ahead.
- In order to secure the LEUCHTIE to the collar / harness with the enclosed fixation loop, pull the open end of the tube through both transparent rubber rings of the loop (see figure).
- Push the battery compartment back into the end of the tube and press them firmly together as far as it can go.

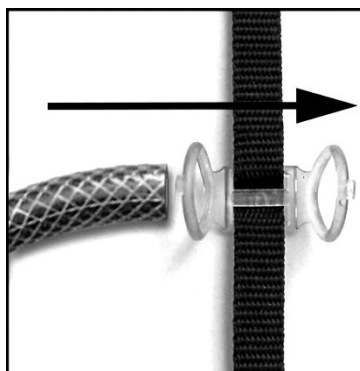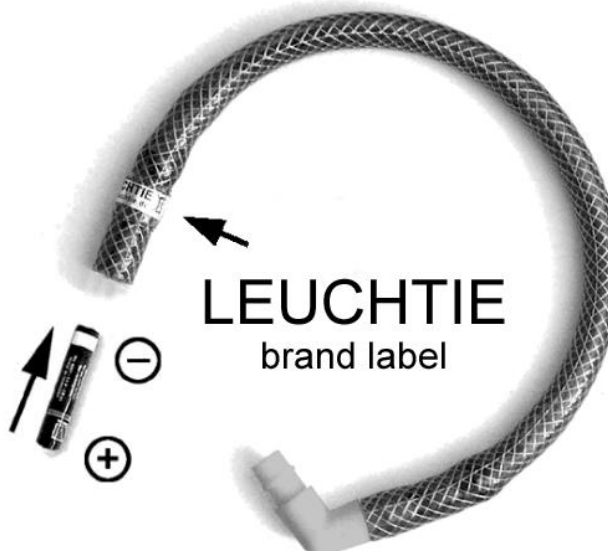


Turning the LEUCHTIE on and off

 The **motion sensor** switches on automatically when the battery compartment points downwards and the LEUCHTIE is in motion. If the battery compartment faces upwards, it slowly switches off after approx. 1 minute. Therefore, suspend the LEUCHTIE e.g. on a hook for storage.

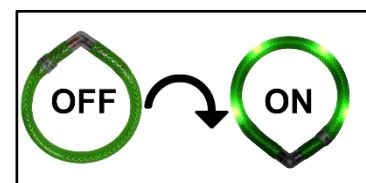

 The **magnetic sensor** is switched on and off using the supplied magnet. The magnetic sensor is located in the light tube, opposite the tip of the battery compartment. To switch your LEUCHTIE on and off, pass the magnet closely over this point.

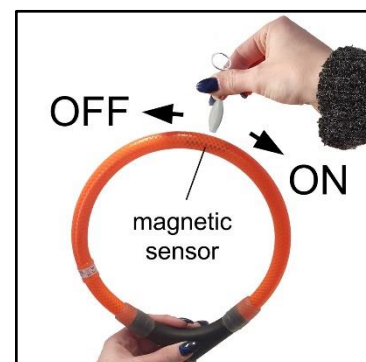

⚠ If the LEUCHTIE is switched off by the magnetic sensor, the motion sensor will not work.

Tip:

As an alternative to the supplied magnet, you can use another sufficiently strong magnet, e.g. your mobile phone.

Battery change

 
- The operating time using 2 alkaline batteries type AAAA / LR 61 is about 50 hours.
- Please use brand alkaline batteries and remove both empty batteries immediately to avoid damage from leaking batteries.
- Please remove both batteries in case of longer disuse (e. g. in the summer).

Replace both batteries immediately if the brightness of the LEDs decreases significantly or if the LEUCHTIE turns off shortly after switching on.

Change the batteries in a dry and clean place and make sure that both the LEUCHTIE and your hands are dry and free of grease.

Replacing the batteries

1. Disconnect both ends of the light tube from the battery compartment one after the other, as explained in the initial start-up on page 1.
2. Remove both empty batteries from the ends of the light tube.
3. Insert 2 new batteries (alkaline type AAAA / LR 61, no rechargeable batteries):
 - into the side of the light tube with LEUCHTIE size sticker with the **negative** pole ahead
 - into the side of the light tube without brand label with the **positive** pole ahead
4. For correct assembly, follow the procedure for closing the LEUCHTIE described on page 1.
5. Test the function by tilting the LEUCHTIE so that it turns on. If the LEUCHTIE does not work, check the correct position of the batteries and the correct attachment of the battery compartment. Please also note the information on page 3.

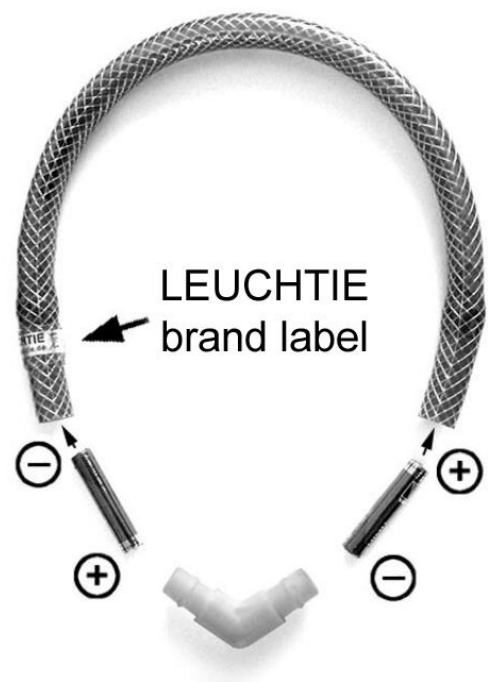

Troubleshooting

If your LEUCHTIE is not working correctly, check the following:

Problem	Possible cause	Solution
Loose contact	The spring in the battery compartment isn't centered.	Pull off the battery compartment from the light tube with a slight twisting motion and put the spring into the right position (centred in the battery compartment), then reassemble. Put some contact spray on the battery poles.
	Dirty connections	Put some contact spray on battery poles and spring tips.
No function	Batteries are inserted incorrectly	Insert the batteries correctly as described on page 2.
	Batteries are empty - your LEUCHTIE may have been stored incorrectly and remained lit for an extended period.	Both batteries must be replaced immediately to avoid damage from leaking batteries – see battery change (page 2)

Spare parts & repair service

If required, you can obtain rechargeable batteries, inexpensive spare parts and useful accessories from your dealer or directly from us:

www.shop.leuchtie.com

If, contrary to expectations, a case of damage occurs which you or your dealer cannot repair, we offer you the possibility of an uncomplicated repair at any time:

www.leuchtie.com/service

Disposal / Recycling / Labeling



This product meets the requirements of the Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of hazardous substances in electrical and electronic equipment.



Please protect the environment and recycle this product. The product is labeled with the symbol of the crossed out waste bin, which means that it should be dropped off free of charge at a local collection point for recycling at the end of its useful life. Disposal in the regular waste is not permitted.



The used batteries cannot be disposed of with the regular household waste! Please dispose of them via the appropriate commercially available containers or drop them off at public collection points.

Safety information

- Please use the LEUCHTIE only for its designated purpose.
- Do not attach a lead to the LEUCHTIE and avoid holding your dog by the LEUCHTIE. Too much force on the LEUCHTIE could cause the batteries, springs and other parts to fall out and get lost.
- LEUCHTIE is not a toy!
Your LEUCHTIE can be damaged by excessive stress (e.g. by throwing or biting hard) and may open under certain circumstances. Small parts such as batteries, contact springs, etc. can fall out and get lost.
Swallowing small parts can be life-threatening! Therefore, keep both your LEUCHTIE as well as the accessories (e.g. the magnet and the attachment loop) out of the reach of your dog and small children. If parts have been swallowed, medical assistance should be sought immediately.
- Do not use the LEUCHTIE if malfunction or damage is apparent. We accept no liability for any further damage or loss.
- Make sure that no humidity gets inside the LEUCHTIE – especially when cleaning it or changing the batteries. When fully closed, the LEUCHTIE is protected against water and humidity very well. Should you notice humidity inside the LEUCHTIE, pull the tube and the battery pack apart with slight angular movements (see figure page 1) and let both parts dry completely. Avoid temperatures above 50°C.
- Do not dry or heat the LEUCHTIE in the microwave under any circumstances - the microwave radiation would destroy the electronics immediately.
- Do not charge or otherwise reactivate, disassemble, heat or short-circuit the supplied batteries.

Cleaning

Clean the LEUCHTIE in warm water and soap or mild detergent if required. Do not use aggressive or solvent-based cleaners. When cleaning the LEUCHTIE, please ensure that the LEUCHTIE is closed properly to prevent humidity from entering.

Warranty

Within the framework of the respective legally applicable warranty we will repair all defects, which can be proven to have been caused by material or manufacturing defects. Excluded from this warranty are all defects caused by improper use, non-observance of this manual, leaked batteries and wear from using the product. Further claims are excluded; there will not be any liability for consequential damages. Opening the product (except for activating and battery changes) and other interferences by unauthorized persons will automatically void the warranty. Repairs or the replacement of parts will not extend the original warranty.

In case of a warranty claim, please contact the retailer from whom you purchased the product.

Manufactured in Germany by:

trends and more GmbH & Co. KG
Hammerweg 123
D - 92637 Weiden
Phone: +49 961 4708440
E-Mail: info@leuchtie.de
WEEE: DE 23706136