

LEUCHTIE® Premium

with step-up technology for extreme and constant brightness



Thank you for choosing LEUCHTIE to enhance your and your dog's safety. For best performance and longevity please read and follow the instructions below.

Page 1: First activation

Page 2: Battery change



Page 3: Trouble shooting

Page 4: Safety info

First start up/ activating

Before you use the LEUCHTIE for the first time, you must remove the battery isolating cap.
(Transport lock)

- The isolation cap is fixed **on the side opposite** the LEUCHTIE sticker.
- Roll back the silicon sleeve (1) **in the direction of the battery compartment** until the joint is free. Your hands should be grease-free. (Optionally dust with flour **lightly** before starting!)
- Pull the light tube and the battery pack apart while **twisting the joint slightly**, taking care not to use excessive force. Remove the red isolating cap (2).
- In order to secure the LEUCHTIE to the collar with the enclosed fixation loop, pull the end of the open tube through both transparent rubber rings of the loop (see figure).
- Mind not to bend the protruding contacts out of shape in the process.
- Push the light tube back into the battery compartment **as far as possible** and roll the silicon sleeve back centred over the joint.

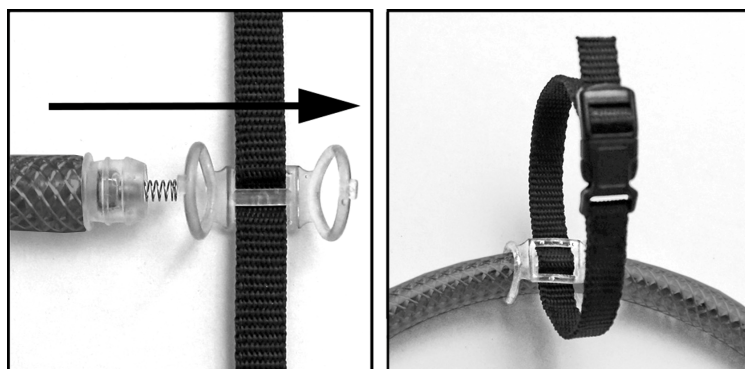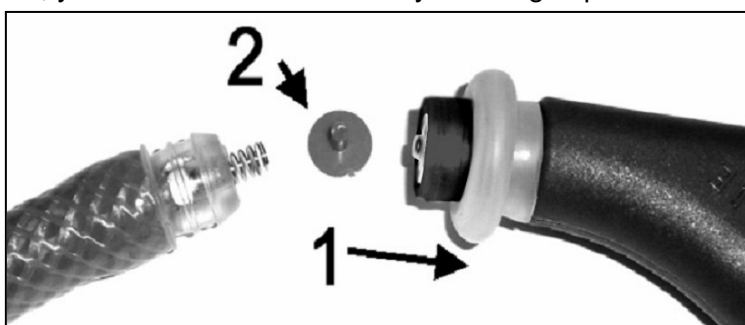

Switching on the LEUCHTIE

LEUCHTIE switches on automatically, if the battery compartment is hanging down or the LEUCHTIE is moved or shaken. Simply pull the LEUCHTIE over the dog's head and it will switch on automatically when the batteries are hanging in the lowermost position. Since the batteries are the heaviest part they will always remain hanging down keeping the light on.

Switching off the LEUCHTIE

LEUCHTIE switches off itself after 1-2 minutes if the battery compartment is hanging up. Keep LEUCHTIE hanging with the battery compartment on top (for example on a wardrobe).

Battery change

LEUCHTIE Premium also suits for the use of rechargeable batteries, but is basically delivered with Alkaline batteries which aren't rechargeable.

When the LEDs starts to flash, the batteries are used and both empty batteries need to be removed immediately!

The operating time using 2 Alkaline batteries type AAA / Micro is about 20 hours.

Please use batteries of the brand Alkaline!


Please remove both batteries in case of longer disuse (e. g. in the summer).

The operating time using rechargeable batteries depends on their capacity.

Replace the batteries in a **clean, dry place** and make sure that the LEUCHTIE is also **clean and dry**.

Your hands and the LEUCHTIE should be grease-free. (Optionally **lightly** dust your hands and the tube with flour before starting!)

1. Roll back the silicon sleeves **onto the battery compartment** until the joints are free.
2. Pull the light tube and the battery pack apart while **twisting the joint slightly**, taking care not to use excessive force. Remove the **both** old batteries.
3. Place the new batteries (**Alkaline Type AAA/Micro or rechargeable batteries**) into the compartment while observing the correct polarity as per illustration.

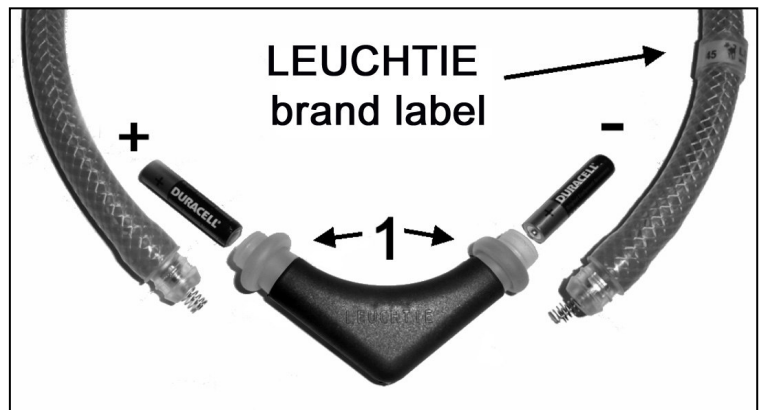

4. Reassemble the light tube and the battery compartment as follows: Connect the **negative end** of the pack to the side **with the label ring** on it, the **positive end** to the **other side**. Watch out for the contact springs being placed in the correct position! They should press on the batteries **centred**.
5. Test that the LEUCHTIE is working by pointing the battery compartment down.
6. If LEUCHTIE is not working, please read information on page 3.

Once LEUCHTIE is working, push the joints together **as far as possible** (the transparent synthetic plug socket must disappear completely) and roll back the silicon sleeves **centered** over the joints.

Do not recharge, dismantle, heat or hot-wire the batteries provided.

Batteries can be fatal if swallowed. Keep all batteries in a safe place, unaccessible to children and dogs. If a battery is swallowed seek medical assistance from your vet or doctor immediately.

Dispose of used batteries responsibly and in accordance with your local recycling regulations.

The extraordinary attributes of LEUCHTIE Premium

- **luminesces more intense, comparable to the tuning set**
- **constant brightness right up to the end of the battery's life or when it needs to be recharged**
- **operates on cost-effective standard size AAA/Micro alkaline batteries**
- **LEUCHTIE Premium also suits for the use of rechargeable batteries**

Troubleshooting

If your LEUCHTIE is not working correctly, check the following:

Problem	Possible cause	Solution
Loose contact	The contact between the batteries and the light tube has a poor connection.	Check if the battery compartment is wholly put-on (the transparent synthetic plug socket must disappear completely). Check if the contact springs aren't tipped over and are pressing straight on the batteries.
No function	The contact between the batteries and the light tube has a poor connection.	Roll back the silicon sleeves onto the battery compartment, push the joints firmly together, and roll the tubes centred back over the joints.
	Batteries are inserted incorrectly	Fill in the batteries correctly - see battery change (page 2).
	The battery compartment was put on the wrong way.	Pull the light tube and the battery pack apart while twisting the joint slightly, taking care not to use excessive force and put it on reversely.
	Batteries are consumed - your LEUCHTIE may have been stored incorrectly and remained lit for an extended period.	Both batteries need immediate replacing – see battery change (page 2) Replace flat or weak batteries to avoid battery leaks!

Replacement parts

If necessary you can order replacement parts from your LEUCHTIE supplier or directly from the LEUCHTIE distributor.

Warranty

This product is covered by manufacturer's warranty for the period of 2 years from the date of purchase. During this period we will repair or replace any defective parts due to faulty material or manufacture. The warranty does not cover any defects resulting from misuse, leaking batteries, from normal wear and tear, or due to not following the above care and safety instructions. Ulterior claims are excluded, the liability for consequential damages isn't assumed.

Any unauthorized tampering with the electronics will void the warranty. The warranty is not extended through repair or part exchange.

All enquiries regarding claims should be addressed to your LEUCHTIE Supplier.

Made in Germany by:

trends and more GmbH
Hammerweg 107
D-92637 Weiden

Tel. +49 961 470 8 474
URL: www.leuchtie.de
E-Mail: info@leuchtie.de

UST-ID:
WEEE:

DE 265028845
DE 23706136HRB 3497

General care and safety

- Use the LEUCHTIE only for its intended purpose.
- Before the first use, make sure the LEUCHTIE is not too tight around the dogs neck, and that it can be removed easily. If you have purchased a LEUCHTIE that is too tight, and you cannot remove it, then you can pull it apart as per battery replacement instructions on page 3.
- Do not attach a lead to the LEUCHTIE and avoid holding your dog by the LEUCHTIE. Too much force on the LEUCHTIE could cause the battery and other parts to fall out and get lost.
- The LEUCHTIE is not a dog-toy. If it is used inappropriately (for example being thrown, chewed, tugged etc.) the LEUCHTIE could be irreparably damaged and or parts become lost. If a battery or any other part are swallowed by your dog, you should seek advice from your vet immediately.
- Do not let your dog play with the LEUCHTIE.
- Should your LEUCHTIE get accidently damaged replace the required parts before any further use.
- During cleaning the LEUCHTIE or changing batteries avoid getting water inside. When fully closed, the LEUCHTIE is well protected from moisture. If you see moisture, roll back the silicon sleeves, pull the light tube and the battery pack apart while twisting the joint slightly, taking care not to use excessive force and let everything dry out overnight.
- Do not expose the LEUCHTIE to temperatures in excess of 60°C.
- Never dry the LEUCHTIE in a microwave. Microwave radiation will destroy the electronics.
- Clean the LEUCHTIE in warm water (maximum 60°C) with a little soap or gentle detergent. Do not use aggressive or solvent-based cleaners.

Cleaning

Clean the LEUCHTIE in warm water and soap or mild detergent if required. Do not use aggressive or solvent-based cleaners. Be careful to avoid moisture getting into the battery compartment. If this happens accidentally, take the light apart and allow it dry out overnight.



This product complies with the regulations of the guideline 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.